

How Do I Check Oil? – 2.2 L RCL

OIL CHECK

Check the oil level in the crankcase every 24 hours of operation or before the engine is started each day. Do not check the oil level while operating the unit. Stop the generator and keep it level to get an accurate reading. To check the oil level, remove the dipstick and wipe the end clean. Reinsert the dipstick and wait at least 30 seconds. Remove the dipstick and check the level. Maintain the oil level between the Full and Add marks on the dipstick, as shown in Figure 4-3. See Section 1, Service Views, for the dipstick location.

Note: Do not operate the set if the oil level is below the Add mark or above the full mark indicated by an "F" on the dipstick.

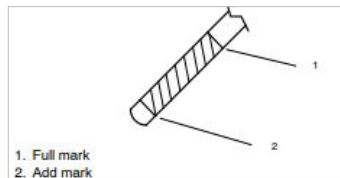


Figure 4-3

ADDING OIL

Adding some oil between oil changes is normal. The amount varies with generator usage. Open the oil fill cap and pour in a small amount of oil using a funnel or other suitable pouring device. See Section 1 of owner's manual, Service Views, for the oil check and oil fill locations.