


# How Do I Check Oil? 14RCA/20RCA

## CHECKING OIL

The generator set is shipped with oil. Before operating the generator set, check the engine oil in the crankcase.

To check the oil level, shut down the generator set and wait several minutes. Remove the dipstick and wipe the end clean, reinsert, and remove. See Figure 4-1. Maintain the oil level between the add and full marks full mark indicated by an "F" on the dipstick. Add 5W-30 or 10W-30 synthetic oil when the oil level is low.

Check the oil level before each use. During extended operation, check the oil level every 8 hours. Do not check the oil level when the generator set is running.

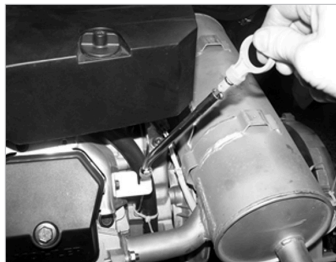

*Figure 4-1*